
## ACCESSLINE communications

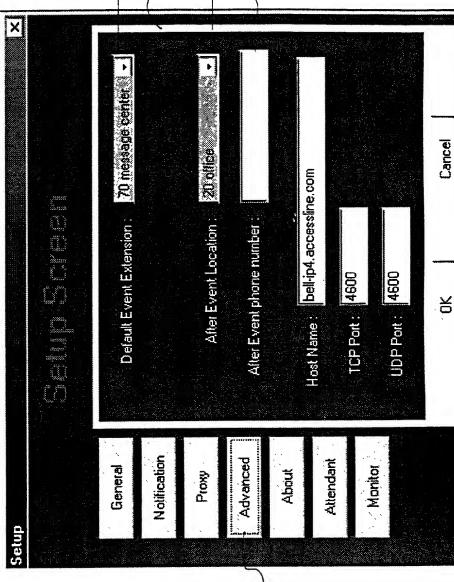


Activates specific ext during event by default

1:001

Activates specific ext after event by default

0/01

L/G. 10

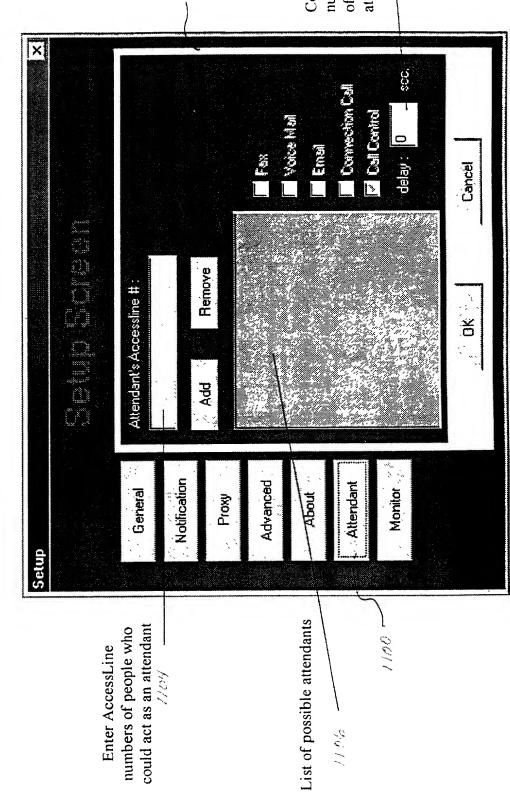

Configure the number of seconds of delay before an attendant is notified

11.61.11

